

# CLUTCH

## Section I

### CONTENTS

	<i>Page</i>
CLUTCH—TRACTORS FITTED WITH 23.C DIESEL ENGINE OR 87 mm. CARBURETTOR ENGINE ... ..	1.1 to 1.11
SINGLE CLUTCH ... ..	1.1
DUAL CLUTCH ... ..	1.2
PEDAL ADJUSTMENT—Single and Dual Clutch ... ..	1.3
PRESSURE PLATE ADJUSTING SCREWS—Dual Clutch only ... ..	1.3
CLUTCH DATA ... ..	1.4
CLUTCH DISMANTLING INSTRUCTIONS ... ..	1.5 to 1.10
Single and Dual clutches, to remove from the engine flywheel ... ..	1.5
Single and Dual clutches, refacing the clutch driven plate ... ..	1.5
Dismantling Single clutch ... ..	1.5 to 1.7
Reassembling Single clutch ... ..	1.7 to 1.8
To assemble Single clutch to the flywheel and adjust ... ..	1.8
Dismantling Dual clutch ... ..	1.9
Reassembling Dual clutch ... ..	1.9
To assemble Dual clutch to the flywheel and adjust ... ..	1.10
CLUTCH RELEASE BEARING, SINGLE AND DUAL CLUTCHES ... ..	1.11
CLUTCH PILOT BEARING, SINGLE AND DUAL CLUTCHES ... ..	1.11
CLUTCH FAULT/CORRECTION ... ..	1.12
CLUTCH—TRACTORS FITTED WITH 3-A-152 DIESEL ENGINE ... ..	1.13
GENERAL ... ..	1.14
CLUTCH PEDAL ADJUSTMENT ... ..	1.14
PRESSURE PLATE ADJUSTING SCREWS—Dual clutch only ... ..	1.14
TO REMOVE CLUTCH FROM ENGINE FLYWHEEL AND TO DISMANTLE ... ..	1.14
ASSEMBLING THE CLUTCH ... ..	1.15
TO ASSEMBLE CLUTCH TO FLYWHEEL ... ..	1.16
CLUTCH ADJUSTMENTS ... ..	1.17
SERVICE TOOLS ... ..	1.17
CLUTCH RELEASE BEARING ... ..	1.17
CLUTCH PILOT BEARING ... ..	1.17
CLUTCH DATA ... ..	1.18
CLUTCH FAULT/CORRECTION ... ..	1.12