


### 1 Engine Bay to Binnacle

- |           |                       |
|-----------|-----------------------|
| 1 – Gn/Yw | +ve Battery           |
| 2 – Yw    | Heater Relay A On     |
| 3 – Bn    | Ignition Relay C On   |
| 4 – Bl    | C Ind W/L             |
| 5 – Rd    | 49a Indicator SW      |
| 6 – Bk    | Headlight Relay B On  |
| 7 – Gn    | Front Right Indicator |
| 8 – Yw    | Front Left Indicator  |


### 2 Binnacle to Rear Light Box

- |              |                        |
|--------------|------------------------|
| 1 – Yellow   | L Indicator            |
| 2 – Blue     | +ve (Unswitched)       |
| 3 – White    | Ground                 |
| 4 – Green    | R Indicator            |
| 5 – Brown    | R Tail + No Plate      |
| 6 – Red      | Stop (switched Ign On) |
| 7 – Bk       | L Tail                 |
| 8 – Not Used |                        |

# Engine Bay Sheet 2

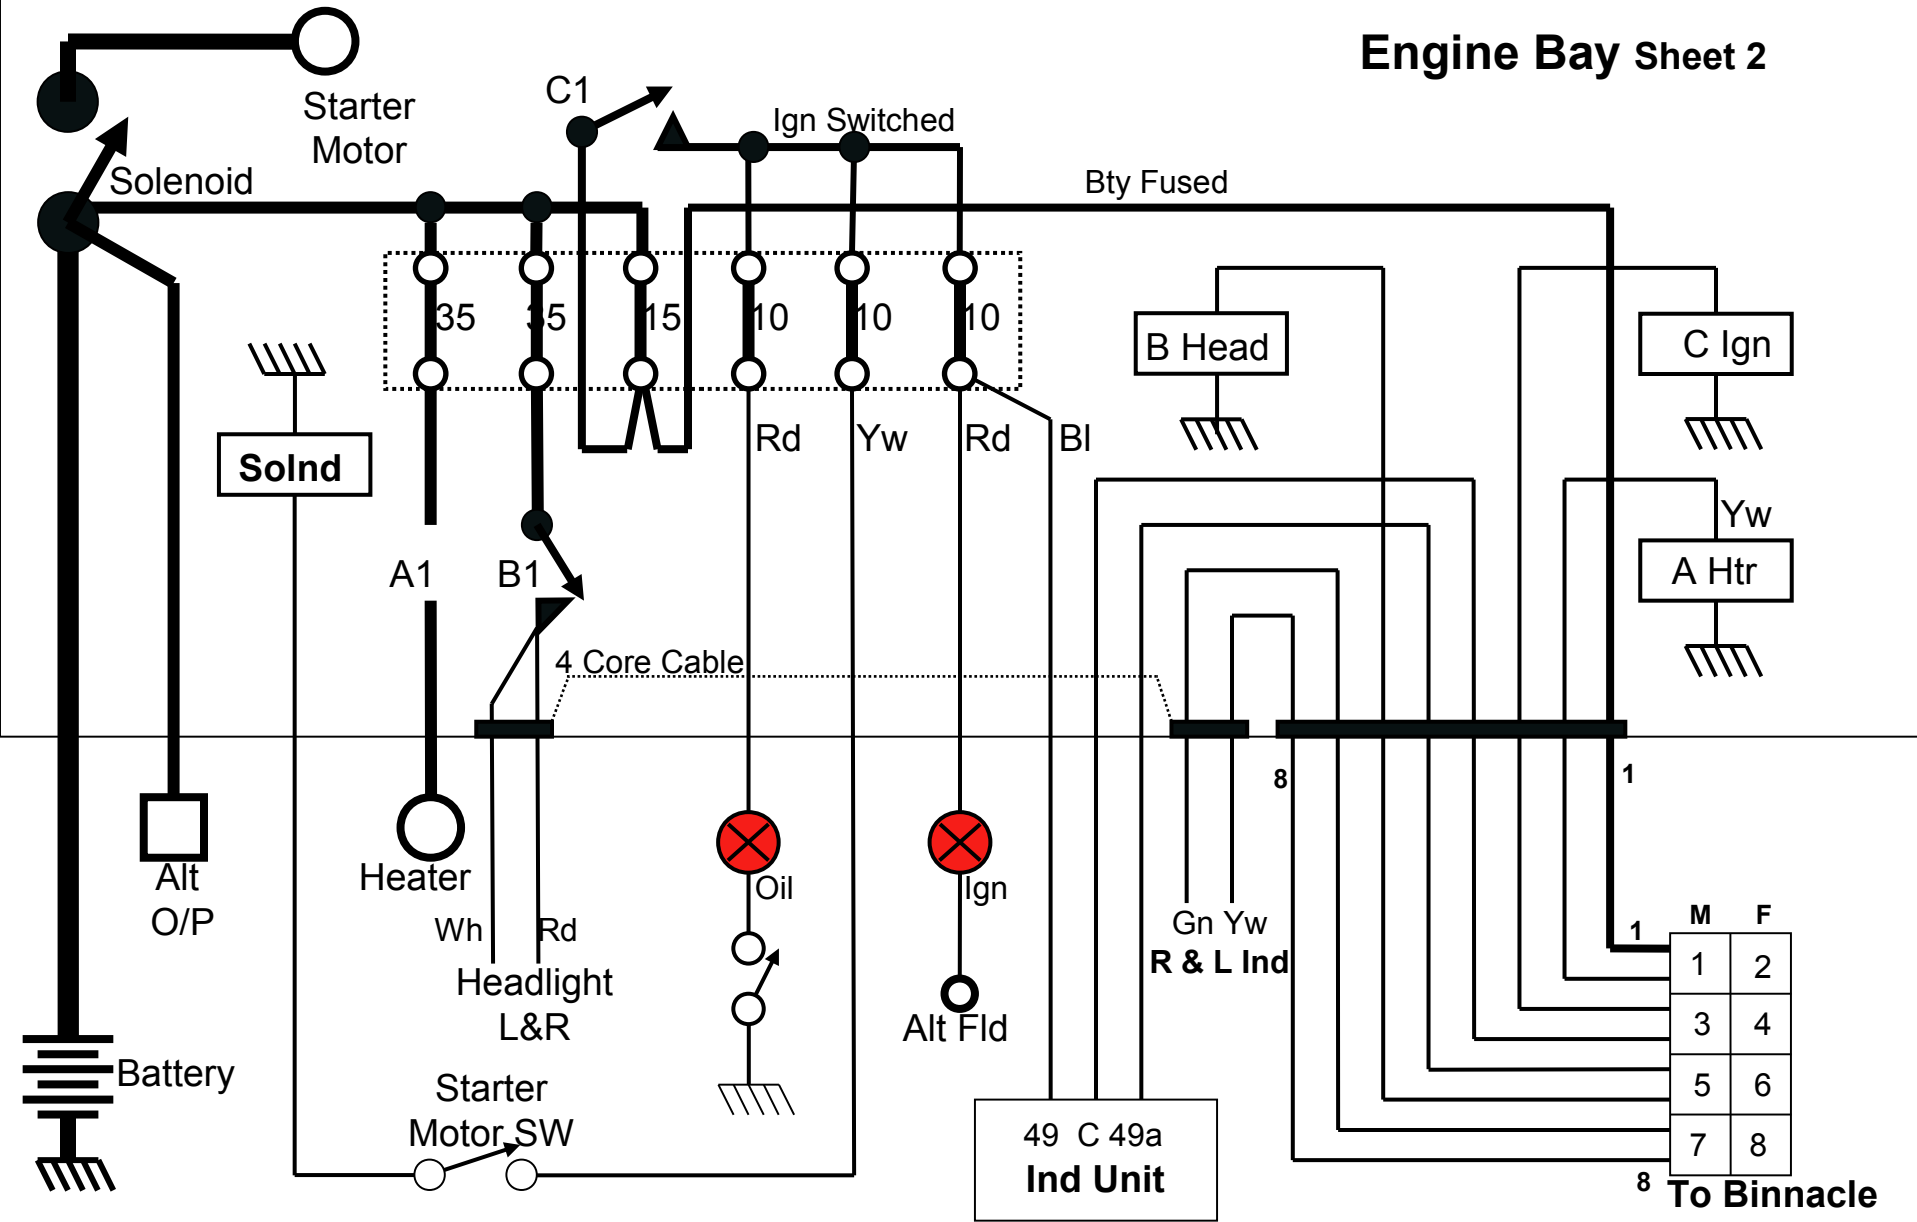

# Binnacle Sheet 3

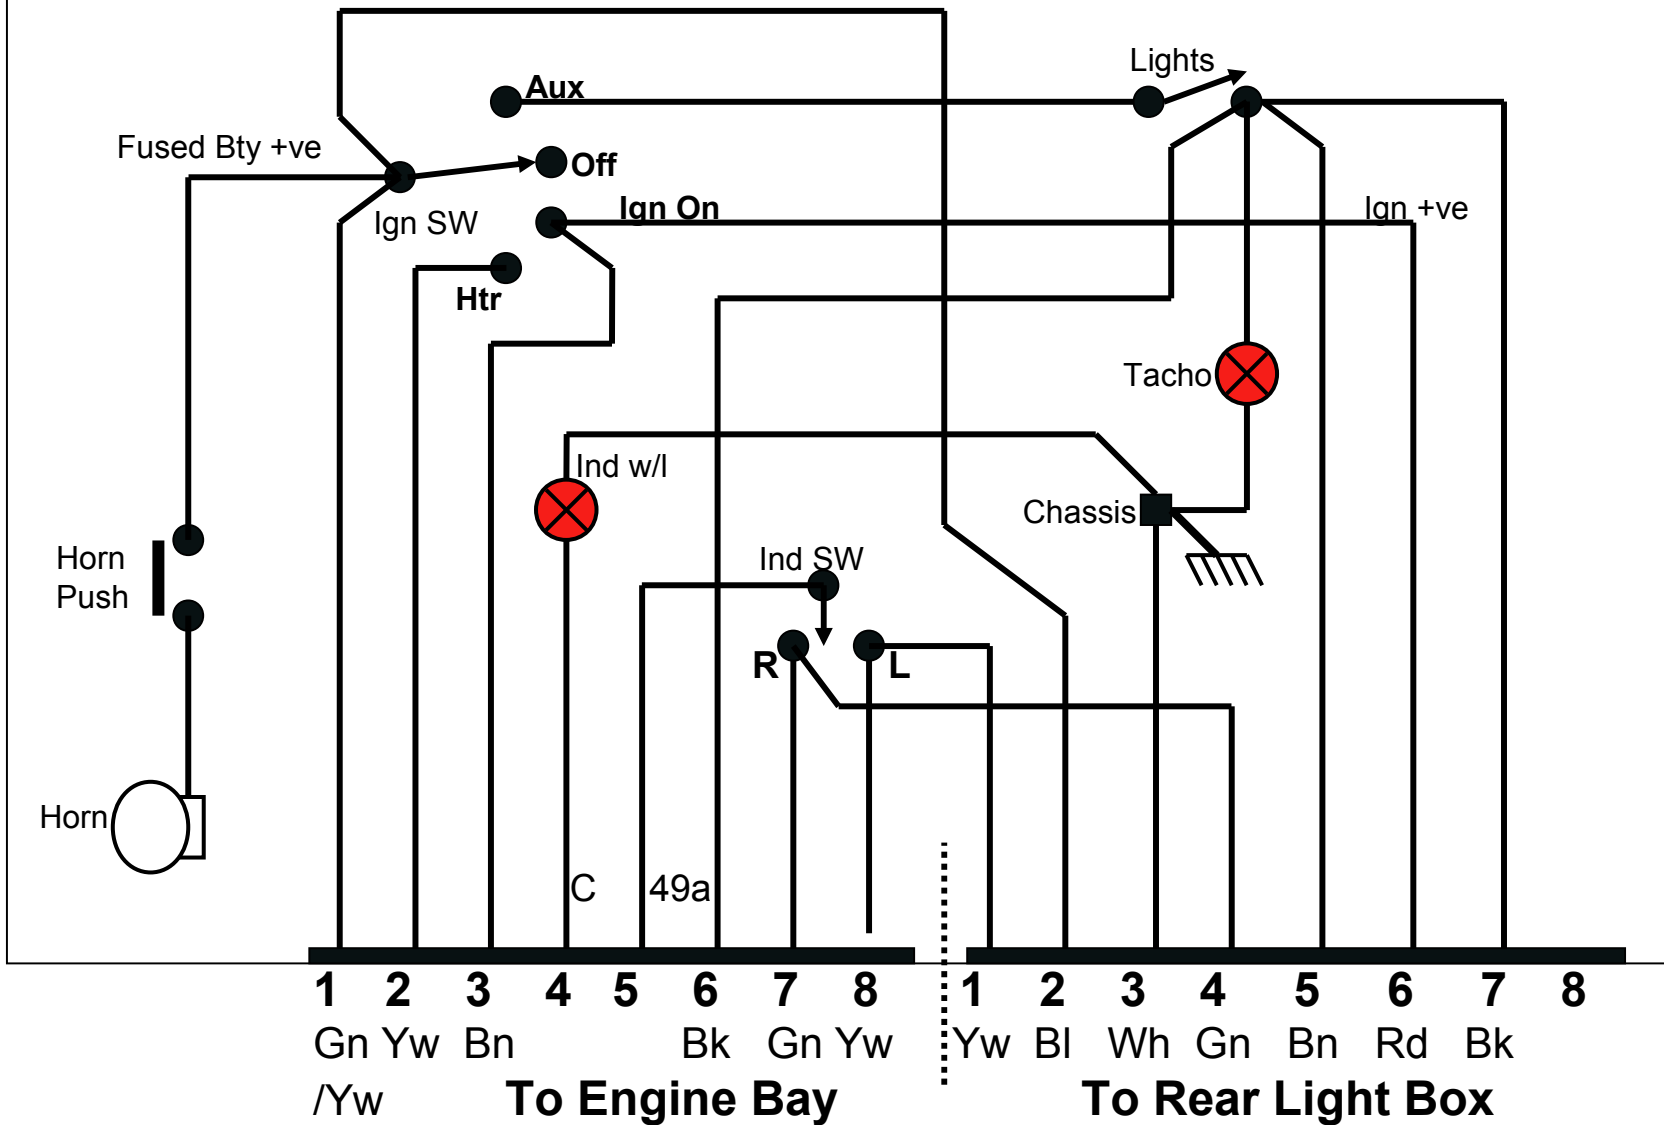

# Rear Lights Box

