


#### WIRING DIAGRAM

- A. Blower Motor
- B. Blower Switch
- C. Wiper Motor
- D. Wiper Switch
- E. Fuse Block
- F. Interior Light
- G1. Air Cleaner Warning Light
- G2. Alternator Charge Warning Light
- G3. Engine Oil Pressure Warning light
- G4. Multi-Power Oil Pressure Warning Light
- H. Temperature Gauge
- I. Fuel Gauge
- J. Cigar Lighter
- K. Fuel Gauge Sender Unit
- L. Starter Switch
- M. Fuse Box
- N. Relay
- O. Air Cleaner Buzzer
- P. Multi-Power Oil Pressure Switch
- Q. Safety Start Switch
- R. Thermostart
- S. Air cleaner Indicator Switch
- T. Starter Motor Solenoid
- U. Starter Motor
- V. Engine Oil Pressure Switch
- W. Battery
- X. Temperature Gauge Switch
- Y. Alternator

#### Colour Code

- 1. Purple
- 2. Red
- 3. White
- 4. Black
- 5. Yellow
- 6. Brown
- 7. Tan/Brown
- 8. Light Green
- 9. Light Blue
- 10. Dark Brown
- 11. Green
- 12. Blue
- 13. Orange
- 14. Grey
- 15. Red/Black
- 16. Pink
- 17. Dark Green
- 18. White/Red
- 19. White/Blue

**ELECTRICAL SYSTEM**

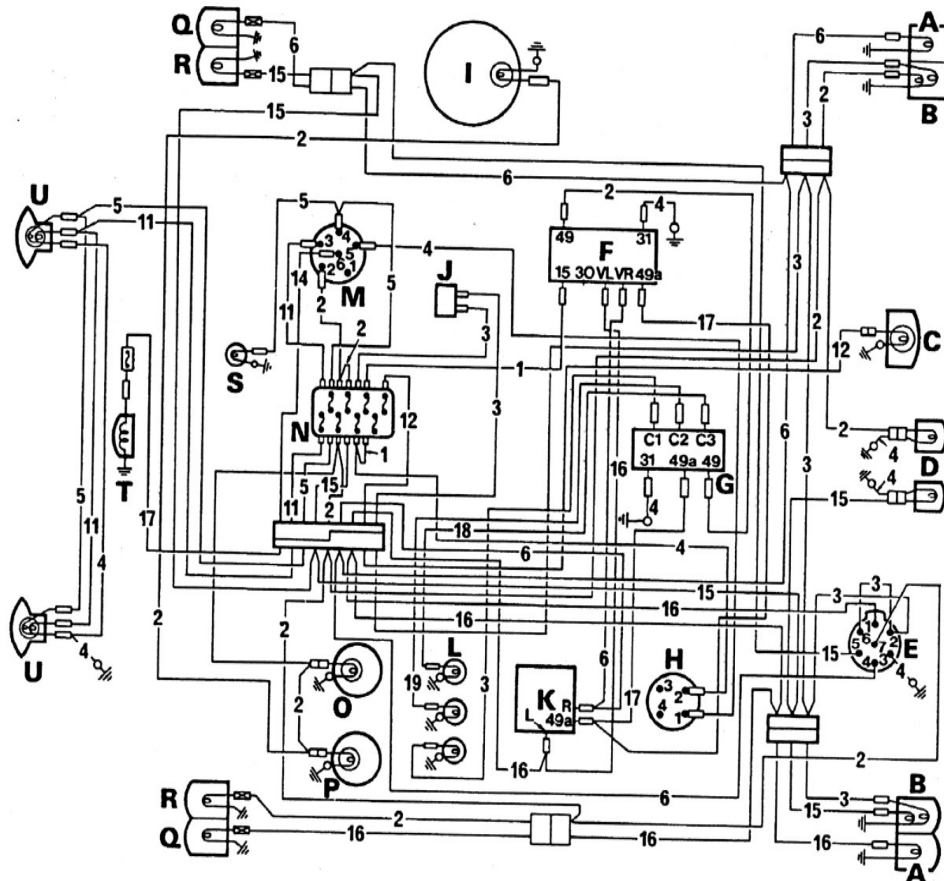

**WIRING DIAGRAM**

- A. Flashing Indicator Light (Rear)
- B. Tail/Brake Light
- C. Plough Light
- D. Number Plate Lights
- E. Trailer Socket
- F. Hazard Warning Lights Switch
- G. Flashing Indicator Relay
- H. Starter Switch
- I. Tachometer Bulb
- J. Brake Light Switch
- K. Flashing Indicator Switch
- L. Flashing Indicator Warning Lights
- M. Light Switch
- N. Fuse Box
- O. Temperature Gauge Bulb
- P. Fuel Gauge Bulb
- Q. Flashing Indicator Light (Front)
- R. Side Light (Front)
- S. Headlight Main Beam Warning light
- T. Horn
- U. Headlight

**Colour Code**

- 1. Purple
- 2. Red
- 3. White
- 4. Black
- 5. Yellow
- 6. Brown
- 7. Tan/Brown
- 8. Light Green
- 9. Light Blue
- 10. Dark Brown
- 11. Green
- 12. Blue
- 13. Orange
- 14. Grey
- 15. Red/Black
- 16. Pink
- 17. Dark Green
- 18. White/Red
- 19. White/Blue